

Шасси

Land Rover Discovery Sport (L550) · Руководство по ремонту

Источник: lrdisc.com · разделов: 1

Содержание

1. Шасси

Шасси

Chassis

- Chassis-Brake-System
 1. Anti-lock Control Anti-lock Brake System Module (G1807249) / Removal and Installation
 2. Anti-lock Control Front Wheel Speed Sensor (G1807250) / Removal and Installation
 3. Anti-lock Control - Traction Control / Description and Operation
 4. Anti-lock Control - Traction Control / Diagnosis and Testing
 5. Front Disc Brake Brake Caliper Anchor Plate (G1785106) / Removal and Installation
 6. Front Disc Brake Brake Disc (G1785104) / Removal and Installation
 7. Front Disc Brake Brake Pads (G1785103) / Removal and Installation
 8. General Information Brake System Bleeding (G1785100) / General Procedures
 9. General Information Brake System Pressure Bleeding (G1785101) / General Procedures
 10. General Information Front Brake Disc Runout Check (G2010035) / General Procedures
 11. General Information Rear Brake Disc Runout Check (G2010036) / General Procedures
 12. General Information / Diagnosis and Testing
 13. Hydraulic Brake Actuation Brake Fluid Reservoir (G1785123) / Removal and Installation
 14. Hydraulic Brake Actuation Brake Master Cylinder (G1785122) / Removal and Installation
 15. Hydraulic Brake Actuation Brake Pedal and Bracket (G2164230) / Removal and Installation
 16. Hydraulic Brake Actuation / Description and Operation
 17. Parking Brake and Actuation Electronic Parking Brake Release When the Vehicle Has no Electrical Power (G1785116) / General Procedures
 18. Parking Brake and Actuation Parking Brake Release Actuator (G1785118) / Removal and Installation
 19. Parking Brake and Actuation / Description and Operation
 20. Parking Brake and Actuation / Diagnosis and Testing
 21. Power Brake aActuation Brake Booster (G1785125) / Removal and Installation
 22. Power Bbrake Actuation / Description and Operation
 23. Rear Disc Brake Brake Caliper (G1785110)
 24. Rear Disc Brake Brake Caliper Anchor Plate (G1785111) / Removal and Installation
 25. Rear Disc Brake Brake Disc (G1785109) / Removal and Installation
 26. Rear Disc Brake Brake Pads (G1785108) / Removal and Installation
- Chassis-Driveline
 1. Driveshaft - Ingenium I4 2.0l Diesel, Vehicles with- active Driveline (G1890848)
 2. Driveshaft - Ingenium I4 2.0l Diesel, Vehicles Without- active Driveline (G1890849)
 3. Front Drive Halfshafts Front Left Halfshaft (G1794494)
 4. Front Drive Halfshafts Front Right Halfshaft - FWD (G1794496)

5. Front Drive Halfshafts Front Right Halfshaft - RHD AWD- IHD AWD (G1794495)
6. Front Drive Halfshafts Inner Constant Velocity Joint Boot (G1794497)
7. Front Drive Halfshafts Outer Constant Velocity Joint Boot (G1794498)
8. General Information Driveshaft to Rear Differential Disconnection (G2152273) / General Procedures
9. Rear Drive Axle- Differential - Vehicles with - Active Driveline Differential Case (G1781298)
10. Rear Drive Axle - Differential - Vehicles with - Active Driveline Differential Control Module (G1781294) / Removal and Installation
11. Rear Drive Axle - Differential - Vehicles with- Active Driveline Differential Draining and Filling (G1671288) / General Procedures
12. Rear Drive Axle - Differential - Vehicles with- Active Driveline Differential Front Bushing (G1781299) / Removal and Installation
13. Rear Drive Axle - Differential - Vehicles with- Active Driveline Differential Rear Bushing (G1781300) / Removal and Installation
14. Rear Drive Axle - Differential - Vehicles with- Active Driveline Differential Support Insulator (G1781301) / Removal and Installation
15. Rear Drive Axle - Differential - Vehicles with- Active Driveline Drive Pinion Flange (G1781296)
16. Rear Drive Axle - Differential - Vehicles with- Active Driveline Drive Pinion Seal (G1781297)
17. Rear Drive Axle - Differential - Vehicles with- Active Driveline Electric Hydraulic Pump (G1781303) / Removal and Installation
18. Rear Drive Axle - Differential - Vehicles with- Active Driveline Hydraulic System Draining, Filling and Bleeding (G2058496) - General procedures
19. Rear Drive Axle - Differential - Vehicles with- Active Driveline Hydraulic System Filling and Bleeding (G1671286) / General Procedures
20. Rear Drive Axle- Differential - Vehicles with- Active Driveline Hydraulic System Fluid Level Check (G2159540) / General Procedures
21. Rear Drive Axle- Differential - Vehicles with- Active Driveline Rear Drive Unit Actuator (G1781295)/ Removal and Installation
22. Rear Drive Axle - Differential - Vehicles with- Active Driveline Rear Halfshaft Seal (G1781302) / Removal and Installation
23. Rear Drive Axle- Differential - Vehicles without- Active Driveline Active on-demand Coupling - Vehicles with- 9HP48 9 - Speed Automatic Transmission - AWD (G1775369)/ Removal and Installation
24. Rear Drive Axle - Differential - Vehicles without- Active Driveline Active on-demand Coupling Drive Pinion Seal (G1775373) / Removal and Installation
25. Rear Drive Axle - Differential - Vehicles without- Active Driveline Active on-demand Coupling Module (G1775371) / Removal and Installation
26. Rear Drive Axle - Differential - Vehicles without- Active Driveline Active on-demand Coupling Oil Pump (G1775372) / Removal and Installation
27. Rear Drive Axle - Differential - Vehicles without- Active Driveline Differential Case - Vehicles with- 9HP48 9-speed Automatic Transmission - AWD (G1775374) / Removal and Installation
28. Rear Drive Axle - Differential - Vehicles without- Active Driveline Differential Draining and Filling (G1775367) / General Procedures
29. Rear Drive Axle- Differential - Vehicles without- Active Driveline Differential Support Insulator (G1775376) / Removal and Installation
30. Rear Drive Axle- Differential - Vehicles without- Active Driveline Drive Pinion Flange - Vehicles with- 9HP48 9-speed Automatic Transmission - AWD (G1775379)
31. Rear Drive Axle- Differential - Vehicles without - Active Driveline Drive Pinion Seal (G1775382) / Removal and Installation

32. Rear Drive Axle- differential - Vehicles without- Active Driveline/ Description and Operation
33. Rear Drive Axle- Differential - Vehicles without- Active Driveline/ Diagnosis and Testing
34. Rear Drive Halfshafts Inner Constant Velocity Joint Boot (G1791656)
35. Rear Drive Halfshafts Outer Constant Velocity Joint Boot (G1791657)
36. Rear Drive Halfshafts Rear Left Halfshaft (G1791654)
37. Rear Drive Halfshafts Rear Right Halfshaft (G1791655)

- Chassis-Steering-System

1. Power Steering Steering Gear (G1778594) / Removal and Installation
2. Power Steering
3. Power Steering Diagnosis and Testing
4. Steering Column Steering Column (G1816641) / Removal and Installation
5. Steering Column Steering Wheel (G1775242) / Removal and Installation
6. Steering Column / Description and Operation
7. Steering Column Diagnosis and Testing
8. Steering Column Switches Ignition Switch (G1774960) / Removal and Installation
9. Steering Column Switches Steering Column Multifunction Switch (G1351134) / Removal and Installation
10. Steering Linkage Tie Rod (G1788230) / Removal and Installation

- Chassis-Suspension

1. Front Suspension Front Shock Absorber (G1779642)
2. Front Suspension Front Stabilizer Bar - AWD (G2028382) / Removal and Installation
3. Front Suspension Front Stabilizer Bar Bushing (G2028384) / Removal and Installation
4. Front Suspension Front Wheel Bearing (G1348362) / Removal and Installation
5. Front Suspension Lower ARM (G2028296) / Removal and Installation
6. Front Suspension Shock Absorber and Spring Assembly (G1779643)
7. Front Suspension Spring (G1779644) / Removal and Installation
8. Front Suspension Wheel Knuckle (G1778608)
9. Front Suspension / Description and Operation
10. Rear Suspension Lower ARM (G1774719) / Removal and Installation
11. Rear Suspension Rear Shock Absorber (G1774678) / Removal and Installation
12. Rear Suspension Rear Stabilizer Bar (G1779703) / Removal and Installation
13. Rear Suspension Rear Stabilizer Bar Bushing (G1779704) / Removal and Installation
14. Rear Suspension Rear Wheel Bearing (G1818219) / Removal and Installation
15. Rear Suspension Spring (G1774680) / Removal and Installation
16. Rear Suspension Toe Link (G1774720) / Removal and Installation
17. Rear Suspension Wheel Knuckle (G1775239)
18. Rear Suspension / Description and Operation
19. Ride and Handling Optimization Ride and Handling Optimization Switch (G1779911)/ Removal and Installation
20. Ride and Handling Optimization / Description and Operation
21. Ride and Handling Optimization / Diagnosis and Testing
22. Vehicle Dynamic Suspension Front Suspension Height Sensor (G1426750) / Removal and Installation
23. Vehicle Dynamic Suspension Rear Suspension Height Sensor (G1779910) / Removal and Installation
24. Vehicle Dynamic Suspension
25. Wheels and Tires

- 26. Wheels and Tires / Diagnosis and Testing
- 27. Wheels and Tires - Tire Pressure Monitoring System Locsync
- 28. Wheels and Tires - Tire Pressure Monitoring System Receiver (G1780281) / Removal and Installation
- 29. Wheels and Tires - Tire Pressure Monitoring System
- 30. Wheels and Tires - Tire Pressure Sensor (G2160695) / Removal and Installation

ne

Wipers and Washers / Diagnosis and TestingChassis-Brake-System

ne

