

Общая информация — Эвакуация автомобиля

Land Rover Discovery Sport (L550) · Руководство по ремонту
Источник: Irdisc.com · разделов: 3

Содержание

- 1. Подъём домкратом и на подъёмнике - автомобиль эвакуация
- 2. Towing Points
- 3. Автомобиль эвакуация

Подъём домкратом и на подъёмнике - автомобиль эвакуация

Jacking and Lifting - Vehicle Recovery

- Towing Points
- Vehicle Recovery

ne

Wheel - free lift - four - PostrampTowing Points


ne

Towing Points

Towing Points

CAUTION:

The single towing points at the front and rear of the vehicle are designed for vehicle recovery purposes only and must NOT be used to tow a trailer or caravan.

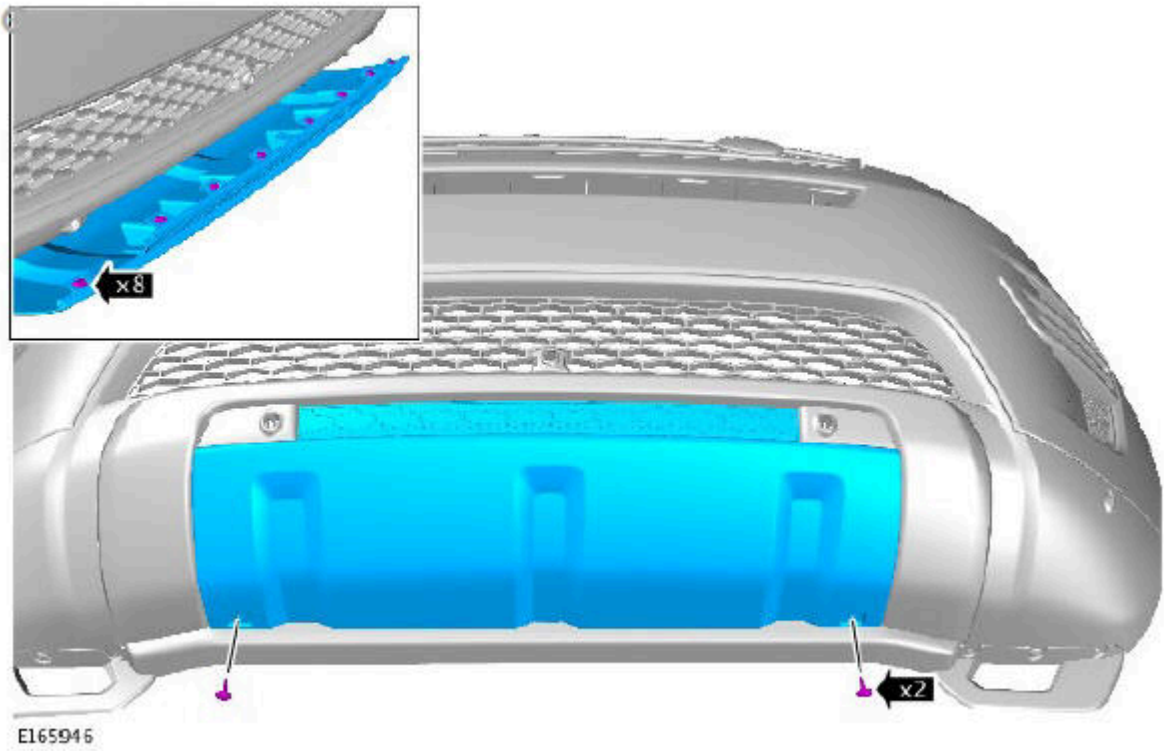

The front towing eye is accessible after releasing and removing the towing eye access panel.

CAUTION:

Make sure that during towing, the towing attachment does not contact the bumper.

The rear towing eye is accessible after releasing the towing eye access panel. Locate the towing eye through the bumper and screw clockwise into its fixing until secure.

CAUTION:

This towing eye should only be used for towing another vehicle or for recovery purposes.

TRANSMISSION SERVICE PARK RELEASE


CAUTION:

Chock the wheels and make sure that all personnel are clear of the vehicle before carrying out the following procedure.

NOTE:

This procedure will require a tool with a 5 mm diameter, to lock the Transmission park release mechanism in the Neutral (N) position.

During vehicle recovery, it is essential that the transmission park release mechanism is activated. The Transmission park release mechanism is activated by a lever, beneath the air cleaner in the engine compartment.

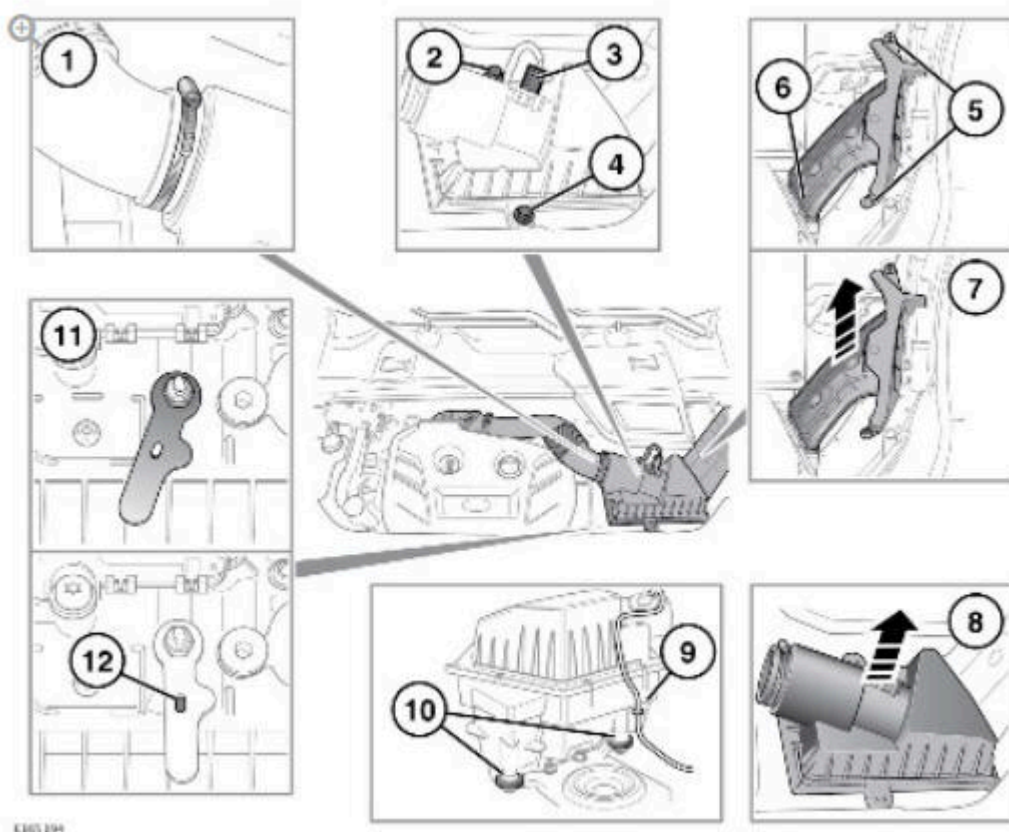

1. Release the clip on the air cleaner outlet pipe.
2. Release the wiring harness clip.
3. Disconnect the electrical connector.
4. Release the bolt.
5. Release the 2 clips.
6. Release the clip.
7. Remove the air cleaner intake pipe.
8. Apply an upwards pressure on the air cleaner assembly.
9. Release the wiring harness clip.
10. Release the air cleaner assembly from the 2 locating grommets, and remove the air cleaner assembly.
11. Rotate the park release lever counter-clockwise, until it is in the forward position.
12. Insert a suitable tool with a 5 mm diameter (Allen key, drill bit etc.), through the hole in the park release lever, and locate the tool in to the transmission casing.

CAUTION:

Make sure that the tool is fully engaged in to the transmission casing.

Incorrect location of the tool may cause damage to the vehicle, and may cause the vehicle to return to the Park (P) position.

When vehicle transportation has been completed, the Transmission park release mechanism will need to be deactivated. To deactivate the Transmission park release mechanism, reverse the steps above.

STEERING COLUMN UNLOCK

During vehicle recovery, the ignition key must remain inside the vehicle and the ignition must be ON.

ne

Автомобиль эвакуация

Vehicle Recovery

WARNINGS:

- **Vehicles should only be recovered on a trailer**
- **If the vehicle is to be recovered from "off-road" conditions it can be towed at 10 Kp/h - 25 Km.**
- **Use extreme caution when moving or towing the vehicle. Serious injury or death may occur.**

CAUTIONS:

- **The following procedures must be followed to make sure that the vehicle is towed in a safe condition and damage to the vehicle transmission system is prevented.**
- **If N (neutral) is selected on the automatic transmission selector and the engine is OFF, the transmission will automatically select P (park) after 10 minutes has elapsed. If the transmission service park release is not activated and the vehicle is towed, damage to the transmission may occur.**

NOTE:

If the battery is to be disconnected, the steering column must be unlocked prior to disconnection and recovery of the vehicle.

1. Make sure that the steering column lock is unlocked.
2. Remove the front towing/lashing eye access panel.

CAUTION:

Make sure that the towing attachment will not contact the front bumper during towing.

3. Secure the towing attachment from the recovery vehicle to the towing/lashing eye.
4. Apply the parking brake.
5. Turn the ignition ON.
6. Apply the footbrake and move the automatic transmission selector to the N - Neutral position.

WARNING:

Do not release the parking brake until towing is about to commence.

Whilst towing, do not attempt to start the engine. With the engine switched off, the power assisted steering system and brake booster will be inoperative thereby resulting in an increase in the effort required to turn the steering wheel and apply the brakes.

7. Active the transmission service park release.
8. Release the parking brake.

TRANSPORTING BY TRAILER

WARNING:

Use extreme caution when moving or towing the vehicle. Serious injury or death may occur.

CAUTIONS:

- **Always use qualified personnel to carry out the vehicle recovery.**
- **Make sure that the vehicle is secured correctly.**

The recommended method of vehicle recovery/transportation of the vehicle is by a trailer designed for that purpose.

OFF - ROAD RECOVERY

WARNING:

If the vehicle is to be recovered from "off-road" conditions it can be towed at 10 Mp/h - 25 Km/h.

It is recommended off-road driving/recovery training is completed prior to attempting off-road recovery.

ON COMPLETION OF VEHICLE RECOVERY

WARNING:

Use extreme caution when removing the towing/lashing equipment.

Vehicle movement is possible and may result in injury.

1. Apply the parking brake.
2. Turn the ignition OFF.
3. Select P (park) on the automatic transmission selector.
4. Deactivate the transmission service park brake release.
- Reverse the transmission service park brake release process.
5. Detach towing equipment from towing/lashing eyes.
6. Install the towing eye access panel.

ne

Towing Points Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions

ne
